

	page		page
<b>HEATING/VENTILATION</b>			
- Air conditioning system with manual controls	1	- Passenger compartment ventilation fan	49
- Heater with manual controls	3	- Compressor function regulation ECU	49
- Diagram showing arrangement of system components on car	4	- Three stage pressure switch	50
- Compressor	5	- Dehydrating filter - Removing-refitting	50
- Operation	6	- Air conditioning system relay	51
- Maintenance and service operations	9	- Line connecting air conditioner to condenser	52
- Operation of compressor ECU	14	- Line connecting condenser to dehydrating filter	53
- Air conditioner wiring diagram	15	- Lines connecting dehydrating filter to line connected to expansion valve	53
<b>HEATER WITH MANUAL CONTROLS</b>			
- Distributor heater assembly - Removing	16	- Line connecting evaporator to compressor	54
- Dismantling fan assembly	19	- Radiator and condenser cooling fans	55
- Dismantling heater-distributor unit	21	- Equipment used for handling coolant in vehicle air conditioning system	55
- Passenger compartment ventilation fan	25	- Connecting equipment to vehicle air conditioning system	56
- Passenger compartment ventilation fan speed resistor	26	- Table showing position of cocks and electrical parts during each operation	57
- Heater radiator	26	- Recovering and recycling coolant from vehicle air conditioning system	57
- Heater control panel	27	- Draining and drying vehicle air conditioning system	58
<b>AIR CONDITIONER (MANUAL CONTROLS)</b>			
- Compressor - Removing-refitting	28	- Charging vehicle air conditioning system	59
- Condenser - Removing-refitting	29	- Transferring coolant from device dispensing cylinder to a container (canister)	59
- Distributor heater evaporator assembly	33	- Transferring coolant from cannister to equipment dispensing cylinder	59
- Dismantling fan assembly	37	- Checking pressures in vehicle system	59
- Dismantling evaporator assembly	38	- Moisture indicator and filter replacement	60
- Dismantling heater-distributor unit	40	- Setting pressures for three-stage pressure switch	61
- Mixer flap control cable	44	- Compressor specifications	62
- Distribution flap control cable	44	- System specifications	62
- Compressor and recirculation air intake activation switches - Removing-refitting	45	- Specifications of additional resistor with thermal fuse for radiator and condenser cooling fans	62
- Passenger compartment ventilation fan speed selection switch	46	- System specifications	62
- Control support assembly - Removing-refitting	46		
- Air intake flap electric actuator	48		
- Passenger compartment ventilation fan speed resistor	48		