

page

page

**INTRODUCTION**

- Exterior features 1
- Interior fittings 2
- Safety 4
- Moveable parts 7
- Hard Top 8
- Panels and paintwork 9
- Recycling 10

**DOOR**

- Removing-refitting door panel and protective lining 13
- Removing-refitting external rear view mirror 14
- Removing-refitting outer door handle 15
- Replacing door lock barrel 16
- Removing-refitting door lock 16
- Removing-refitting door opening lever 17
- Removing-refitting lowering window glass 17
- Removing-refitting window opening device 18
- Adjustments to lowering window glass 19
- Removing-refitting door 20
- Adjustments to door 20

**BUMPERS**

- Removing-refitting front bumper 21
- Removing-refitting rear bumper 23

**BONNET LID**

- Removing-refitting bonnet lid 24
- Adjustments 25
- Removing-refitting and adjusting bonnet closing device 25
- Removing-refitting bonnet lid lock 26
- Replacing bonnet lid opening control rod 26

**BOOT LID**

- Removing-refitting boot lid 27
- Adjustments 27
- Removing-refitting and adjusting boot lid lock striker 27
- Removing-refitting boot lid closing device 28
- Replacing boot lid opening control rod 29

**SEATS**

- Removing-refitting seat 30
- Dismantling-reassembling seat 30

- Removing-refitting head restraint 32
- Dismantling-reassembling backrest 33
- Instructions for moving and fitting seats with pre-tensioners 34
- Safety regulations to be observed for pre-tensioners 34

**INTERIOR FITTINGS**

- Removing-refitting dashboard 36
- Removing-refitting seat belts 42

**WINDOW GLASSES**

- Replacing front window (windscreen) 43

**HOOD**

- The hood 50
- Removing-refitting complete hood 52
- Removing-refitting and adjusting hood handles 53
- Removing-refitting hood compartment inner lining 54
- Removing-refitting right hood cover lock 54
- Removing-refitting left hood cover lock and replacing control cable 55
- Removing-refitting hood cover 56
- Removing-refitting hood opening pistons (gas springs) 57
- Removing-refitting hood fabric 57
- Refitting hood fabric 59
- Replacing hood rear windscreen 60

**REPLACING BODY PANELS**

- Symbols for illustrations 62
- Replacing front cover 63
- Replacing front cover support 67
- Replacing front wing 71
- Replacing complete windscreen seal 75
- Replacing front cross member 80
- Replacing rear cover 86
- Replacing front side panel 90
- Partial replacement of front side panel 96
- Replacing front pillar 102

	page
- Partial replacement of rear side member	109
- Replacing rear floor	113
- Replacing rear cross member	118
- Replacing rear cover support	122
- Replacing rear wing	126
- Replacing underdoor side member	130
- Replacing rear wheel arch	134
- Replacing rear pillar	138
- Replacing outer underdoor panel	142
- Diagram showing bodyshell housing dimensions	144
- Sealants and anti-abrasion vinyl protective	146
- Diagram for checking underbody	148
- Diagram showing bodyshell housing dimensions	150